



AVORIS DP-1

РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ

Пожалуйста, прочитайте внимательно все пункты руководства пользователя, чтобы избежать возможных проблем в работе устройства.

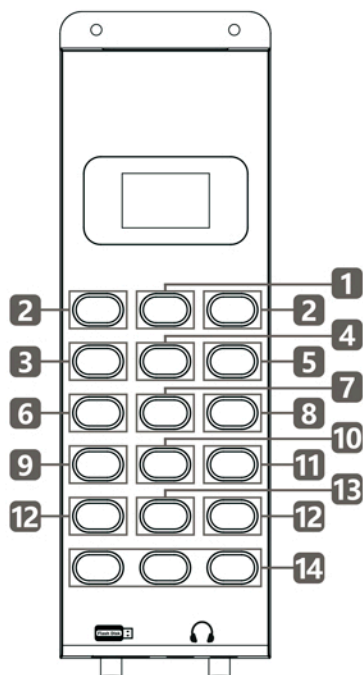

- | | |
|-----------------------|------------------------------|
| 1 POWER | 8 CHORD |
| 2 Volume+/- | 9 RECORD |
| 3 TONE | 10 PLAY |
| 4 START/STOP | 11 Metronome |
| 5 DEMO | 12 CHOOSE+/- |
| 6 RHYTHM | 13 MENU |
| 7 FILL-IN/SYNC | 14 Bluetooth/MP3 mode |

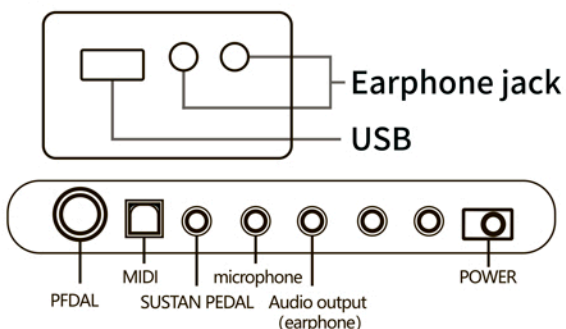

1. POWER

Нажмите кнопку POWER чтобы начать играть на пианино

2. VOLUME +/-

Используйте кнопку Громкость + для увеличения громкости и - для уменьшения громкости. Регулятор громкости имеет 16 сегментов (0 ~ 15) и по умолчанию равен 12 после включения питания. в спящем режиме громкость возвращается к значению по умолчанию

3. TONE

Нажмите кнопку [TONE], с помощью кнопки [CHOOSE +/-] вы можете выбрать тембр.

4. START/STOP

Нажмите кнопку [START/STOP] в первый раз, чтобы начать воспроизведение ритма. Второй раз нажмите кнопку [START/STOP], чтобы остановить воспроизведение ритма. В режиме записи, воспроизведения, демо, метронома нажмите кнопку [START/STOP], чтобы выйти из текущего режима.

5. DEMO

Нажмите кнопку [DEMO] в первый раз, чтобы войти в демо-режим и воспроизвести его в последовательности с первой композиции. Нажмите кнопку [DEMO] второй раз, чтобы выйти из демо-режима. В демо-режиме нажмите кнопку [CHOOSE +/-] для переключения композиций.

6. RHYTHM

Нажмите клавишу [START/STOP], чтобы войти в режим ритма. После нажатия кнопки [RHYTHM] вы можете использовать кнопку [CHOOSE +/-] для выбора ритма.

R973	R&B Soul Ballad2	R983	Big Band Fast5	R993	Classic Big Band3
R974	Euro Hip Hop4	R984	Orchestra Swing8	R994	French Jazz5
R975	Trip Hop2	R985	Orchestra Swing9	R995	Jump Jive3
R976	Ibiza 2004 2	R986	Rock Cha Cha5	R996	Mod Big Band Shfl5
R977	Soft Rock4	R987	Organ Swing3	R997	Modern Big Band5
R978	Chart Guita rPop3	R988	Secret Service3	R998	Big Band Shuffle 13
R979	Guijira5	R989	Animation Bld3	R999	Big Band Shuffle 14
R980	Easy Listening4	R990	Reggae4	R1000	Big Band Shuffle 15
R981	Bebop3	R991	Frankly Soul3		
R982	Orch Big Band4	R992	Jazz Funk3		

17. Приложение 3. Список демо-песен

S001	Chopin Fantasia Impromptu	S044	Debussy Aeabesque	S099	Czerny 599 No.049
S002	Chopin Noctume	S045	Dubessy Clair De lune	S100	Czerny 599 No.050
S003	Chopin Petit Chien	S046	L-C.Daquin Le Coucou	S101	Czerny 599 No.051
S004	Chopin Chanson De L'adieu	S047	Karl Bohm The Fountain	S102	Czerny 599 No.052
S005	Chopin Nocturne	S048	Burgmüller Pastorale	S103	Czerny 599 No.053
S006	Chopin Black keys	S049	Korsakov Bumblebee	S104	Czerny 599 No.054
S007	Chopin - Valse op.64 no.2	S050	Haydn-Sunrise	S105	Czerny 599 No.055
S008	Beethoven- Piano Sonata op.13 "Pathetique" 2nd mov	S051	Czerny 599 No.001	S106	Czerny 599 No.056
S009	Beethoven For Elise	S052	Czerny 599 No.002	S107	Czerny 599 No.057
S010	Beethoven Mondschein Sonate	S053	Czerny 599 No.003	S108	Czerny 599 No.058
S011	Beethoven Minuet In G	S054	Czerny 599 No.004	S109	Czerny 599 No.059
S012	Beethoven Marcia Alla Turca	S055	Czerny 599 No.005	S110	Czerny 599 No.060
S013	Beethoven piano sonata op.49-2 1st mov	S056	Czerny 599 No.006	S111	Czerny 599 No.061
S014	Beethoven Ecossaise	S057	Czerny 599 No.007	S112	Czerny 599 No.062
S015	Mozart Twinkle Twinkle Little Star	S058	Czerny 599 No.008	S113	Czerny 599 No.063
S016	Mozart Turkish March	S059	Czerny 599 No.009	S114	Czerny 599 No.064
S017	Mozart Sonate	S060	Czerny 599 No.010	S115	Czerny 599 No.065
S018	Mozart Menuett	S061	Czerny 599 No.011	S116	Czerny 599 No.066
S019	Bach Waltz In A Mino	S062	Czerny 599 No.012	S117	Czerny 599 No.067
S020	Bach Menuett	S063	Czerny 599 No.013	S118	Czerny 599 No.068
S021	Bach The Well-Tempered Clavier	S064	Czerny 599 No.014	S119	Czerny 599 No.069
S022	Bach Bourree	S065	Czerny 599 No.015	S120	Czerny 599 No.070
S023	Bach Invention	S066	Czerny 599 No.016	S121	Czerny 599 No.071
S024	Schubert Military Marches	S067	Czerny 599 No.017	S122	Czerny 599 No.072
S025	Schubert Moments Musicaux	S068	Czerny 599 No.018	S123	Czerny 599 No.073
S026	Schumann Traumerei	S069	Czerny 599 No.019	S124	Czerny 599 No.074
S027	Schumann Frohlicher Landmann	S070	Czerny 599 No.020	S125	Czerny 599 No.075
S028	Schumann Sicilienne	S071	Czerny 599 No.021	S126	Czerny 599 No.076
S029	Richard Ballade Pour Adeline	S072	Czerny 599 No.022	S127	Czerny 599 No.077
S030	Richard Ping Pong Sous Les Arbres	S073	Czerny 599 No.023	S128	Czerny 599 No.078
S031	Richard A Comme Amour	S074	Czerny 599 No.024	S129	Czerny 599 No.079
S032	Richard Mariage D'amour	S075	Czerny 599 No.025	S130	Czerny 599 No.080
S033	Mendelssohn Jagerlied op.19b-3	S076	Czerny 599 No.026	S131	Czerny 599 No.081
S034	Mendelssohn Frühlingslied	S077	Czerny 599 No.027	S132	Czerny 599 No.082
S035	Haydn Little Serenade	S078	Czerny 599 No.028	S133	Czerny 599 No.083
S036	Pachelbel Canon In D	S079	Czerny 599 No.029	S134	Czerny 599 No.084
S037	Badarzewska Maiden's Prayer	S080	Czerny 599 No.030	S135	Czerny 599 No.085
S038	Liszt Liebestraume	S081	Czerny 599 No.031	S136	Czerny 599 No.086
S039	Tchaikovsky- Danse des mirlitons	S082	Czerny 599 No.032	S137	Czerny 599 No.087
S040	Oesten Dolly's Dreaming Awakening	S083	Czerny 599 No.033	S138	Czerny 599 No.088
S041	Dvorak Humoresque	S084	Czerny 599 No.034	S139	Czerny 599 No.089
S042	Joplin The Entertainer	S085	Czerny 599 No.035	S140	Czerny 599 No.090
S043	Debussy La Fille aux Cheveux de Lin	S086	Czerny 599 No.036	S141	Czerny 599 No.091
		S087	Czerny 599 No.037	S142	Czerny 599 No.092
		S088	Czerny 599 No.038	S143	Czerny 599 No.093
		S089	Czerny 599 No.039	S144	Czerny 599 No.094
		S090	Czerny 599 No.040	S145	Czerny 599 No.095
		S091	Czerny 599 No.041	S146	Czerny 599 No.096
		S092	Czerny 599 No.042	S147	Czerny 599 No.097
		S093	Czerny 599 No.043	S148	Czerny 599 No.098
		S094	Czerny 599 No.044	S149	Czerny 599 No.099
		S095	Czerny 599 No.045	S150	Czerny 599 No.100
		S096	Czerny 599 No.046		
		S097	Czerny 599 No.047		
		S098	Czerny 599 No.048		

Нажмите кнопку [-], чтобы отключить функцию двух тонов, и на цифровой трубке появится индикация OFF.

Нажмите кнопку [MENU] в четвертый раз, чтобы войти в режим настройки громкости аккомпанемента, на цифровом индикаторе отобразится ACC, а через 3 секунды на цифровом индикаторе отобразится текущее значение громкости аккомпанемента.

Нажмите кнопку [+/-], чтобы установить значение громкости аккомпанемента, диапазон регулировки -00-16, на цифровом индикаторе отобразится A00~A16.

Нажмите кнопку [MENU] в пятый раз, чтобы войти в режим настройки транспонирования, на цифровом индикаторе отобразится [trs], а через 5 секунд на цифровом индикаторе появится текущее значение транспонирования.

Нажмите кнопку [+/-], чтобы установить значение громкости аккомпанемента, диапазон регулировки составляет -12~12, на цифровом индикаторе отобразится -12~12.

Нажмите кнопку [MENU] в шестой раз, чтобы войти в режим настройки скорости, на цифровом индикаторе отобразится [rPo], а через 3 секунды на цифровом индикаторе появится текущее значение скорости.

Нажмите кнопку [+/-], чтобы установить значение скорости, диапазон регулировки 30~300, и на цифровом индикаторе отобразится 30~300.

Нажмите кнопку [MENU] в седьмой раз, чтобы войти в режим настройки обучения, на цифровом индикаторе отобразится [tEA], а через 3 секунды на цифровом индикаторе отобразится текущий режим настройки обучения (OFF/Ln1/Ln2/Ln3).

Нажмите кнопку [+/-], чтобы установить режим обучения, регулируемый диапазон OFF/Ln1/Ln2/Ln3, цифровая трубка отобразит (OFF/Ln1/Ln2/Ln3)

OFF : Выход из режима обучения.

Ln1: режим обучения OKON.

Ln2: режим последующего обучения.

Ln3 : режим обучения ансамблю.

* Нажмите кнопку [MENU] в восьмой раз, чтобы войти в режим включения/выключения подсветки клавиш.

Нажмите кнопку [+/-], чтобы включить/выключить подсветку клавиш. (Доступно только для версии с подсветкой)

14. Bluetooth/mp3 Mode

1. Включение/выключение BT/MP3:

Подключите телефон к Bluetooth и перейдите в режим воспроизведения звука по Bluetooth.

Вставьте диск U, чтобы перейти в режим MP3 напрямую.

2. BT/MP3 Воспроизведение/Пауза

Нажмите кнопку **[⏮/⏭]**, чтобы воспроизвести или остановить композицию BT/MP3.

Нажмите кнопку **[⏮/⏭]** более чем на 1 секунду, чтобы выбрать режим BT или MP3.

3. Выбор композиции BT/MP3

Нажмите кнопку **[⏮/⏭]** в течение 1 секунды, чтобы выбрать предыдущую композицию BT/MP3.

Нажмите кнопку **[⏮/⏭]** в течение 1 секунды, чтобы выбрать следующую композицию BT/MP3.

4. Регулировка громкости BT/MP3

Нажмите кнопку **[⏮/⏭]** более чем на 1 секунду, чтобы уменьшить громкость BT/MP3.

Нажмите кнопку **[⏮/⏭]** более чем на 1 секунду, чтобы увеличить громкость BT/MP3.

15. Приложение 1. Таблица тембров

T001	Acoustic Grand Piano	T019	Rock Organ	T037	Slap Bass 1
T002	Bright Acoustic Piano	T020	Church Organ	T038	Slap Bass 2
T003	Electric Grand Piano	T021	Reed Organ	T039	Synth Bass 1
T004	Honky-tonk Piano	T022	Accordion	T040	Synth Bass 2
T005	Rhodes Piano	T023	Harmonica	T041	Violin
T006	Chorused Piano	T024	Tango Accordion	T042	Viola
T007	Harpsichord	T025	Acoustic Guitar (nylon)	T043	Cello
T008	Clavichord	T026	Acoustic Guitar (steel)	T044	Contrabass
T009	Celesta	T027	Electric Guitar (jazz)	T045	Tremolo Strings
T010	Glockenspiel	T028	Electric Guitar (clean)	T046	Pizzicato Strings
T011	Music box	T029	Electric Guitar (muted)	T047	Orchestral Harp
T012	Vibraphone	T030	Overdriven Guitar	T048	Timpani
T013	Marimba	T031	Distortion Guitar	T049	String Ensemble 1
T014	Xylophone	T032	Guitar Harmonics	T050	String Ensemble 2
T015	Tubular Bell	T033	Acoustic Bass	T051	Synth Strings 1
T016	Dulcimer	T034	Electric Bass(finger)	T052	Synth Strings 2
T017	Drawbar Organ	T035	Electric Bass (pick)	T053	Choir Aahs
T018	Percussive Organ	T036	Fretless Bass	T054	Voice Oohs

R571	Cumbia3	R637	Pop Waltz3
R572	Latin Rock	R638	Bhangra2
R573	Disco Latin	R639	Twist3
R574	Tijuana	R640	German March2
R575	Reggae2	R641	Enka2
R576	Salsa2	R642	Bolero Lento2
R577	Calypso	R643	Midnight Swing2
R578	Guad Dance	R644	French Jazz2
R579	Reggae 12Beat	R645	Latin Party Pop2
R580	Reggae 16Beat	R646	Tango6
R581	Swing Fox	R647	Tango7
R582	Slow Fox	R648	Parranda2
R583	Organ Cha Cha	R649	Latin Rock2
R584	Organ Quick Step	R650	Acoustic Rock3
R585	Cat Groove	R651	80's Pop3
R586	Dixie Jazz	R652	60's Soul2
R587	Medium Jazz	R653	Fusion Shuffl3
R588	Jazz Big Band	R654	Fusion Shuffl4
R589	Jazz Club	R655	16 Beat Pop3
R590	Ragtime2	R656	16 Beat Pop4
R591	Big Band Shuffle 1	R657	60's Rock 3
R592	Big Band Shuffle 2	R658	Brit Rock Pop2
R593	Big Band Shuffle 3	R659	Blueberry Blues2
R594	Fast Band 1	R660	Skiffle3
R595	Fast Band 2	R661	Mambo6
R596	Frankly Soul	R662	Mambo7
R597	Jazz Funk	R663	Club Pop3
R598	Classic Big Band	R664	Schlager Italia2
R599	French Jazz	R665	Power Rock3
R600	Jump Jive	R666	Rock'n Roll 3
R601	Standard Rock2	R667	Cool8 Beat2
R602	16 Beat Ballad3	R668	British Pop6
R603	Contemp Rock2	R669	British Pop7
R604	EP Ballad2	R670	8 Beat Soul3
R605	Fusion4	R671	Brit Pop2
R606	Fusion5	R672	Disco Latin2
R607	Funk2	R673	Brit Pop Swing2
R608	Guitar Serenade2	R674	Fast Gospel2
R609	Organ Ballad3	R675	Fast Bossa2
R610	Joropo2	R676	60's Guitar Pop2
R611	Reggaeton2	R677	90's Soul
R612	French Waltz2	R678	Funk Shuffl 3
R613	Merengue2	R679	8 Beat Rock3
R614	Pop Ballad2	R680	Rock Cha Cha2
R615	Norteno2	R681	Guijira2
R616	Jig2	R682	Rock Ballad2
R617	Hawaiian2	R683	Soul 5
R618	70's Disco3	R684	Classic 8Beat2
R619	70's Disco4	R685	Bolero3
R620	Club Beat2	R686	Soul Brothers2
R621	Rap 4	R687	Happy Reggae2
R622	Disco House2	R688	Pop Latin2
R623	MOR Swing2	R689	6-8Slow Rock2
R624	Retro Pop2	R690	6-8 Modern2
R625	Calypso2	R691	6-8 Orchestral2
R626	Trance Pop2	R692	Slow Soul2
R627	Big Band Shuffle4	R693	Piano Ballad3
R628	Big Band Shuffle5	R694	Disco Trot2
R629	Big Band Shuffle6	R695	Disco Hands2
R630	German Rock2	R696	British Pop8
R631	Schlager Beat2	R697	Italian Mazurka2
R632	Disco Funk2	R698	Bohemian Waltz2
R633	Disco Samba2	R699	Samba3
R634	New Hip Hop2	R700	Samba4
R635	Cat Groove2	R701	Jive3
R636	Laff2	R702	Foxtrot3

R703	Pasodoble2
R704	Highland Waltz2
R705	Schlager Polka2
R706	Grupera2
R707	Danzon2
R708	Schlager Alp2
R709	Saeidy2
R710	Bhajan2
R711	Hip Hop Groove2
R712	Hip Shuffle2
R713	Organ Groove2
R714	Chart Pop3
R715	Country Ballad3
R716	Romantic Ballad2
R717	Analog Ballad2
R718	Electro Pop2
R719	Blues Rock2
R720	Rave2
R721	US Chart Hit2
R722	Alp Ballad3
R723	8 Beat Modern2
R724	Euro Hip Hop2
R725	Disco Pop2
R726	Disco Philly2
R727	Mod Big BandShfl2
R728	Modern Big Band2
R729	8 Beat Adria2
R730	Disco Chocolate2
R731	Euro Trance2
R732	Euro Beat3
R733	Techno4
R734	Reggae3
R735	Chillout Cafe2
R736	Love Song2
R737	French House2
R738	Jazz Waltz4
R739	Classic Piano2
R740	Disco Party2
R741	Club Dance2
R742	Jazz Gtr Club2
R743	Modern Jazz2
R744	Polka Pop2
R745	USA March2
R746	Ober Polka2
R747	Easy Listening2
R748	Fast Band3
R749	Fast Band4
R750	Big Band Fast3
R751	Orchestra Swing3
R752	Orchestra Swing4
R753	Finger Pickin2
R754	Hully Gully2
R755	Viennese Waltz2
R756	Show Tune2
R757	Rumba3
R758	Schlager Rock4
R759	Jazz Waltz Fast2
R760	Country Ballad4
R761	Dixieland2
R762	French Jazz3
R763	Easy Country2
R764	Country Hits2
R765	Country 8 Beat2
R766	Blue Grass4
R767	Blue Grass5
R768	Blue Grass6

T247	Tsugaru 4	T311	Attack Barafon 4	T375	Bag Pipe 6	R187	China Folk 2	R251	Detroit Pop1	R315	New R&B
T248	Tsugaru 5	T312	Hard Barsoon 3	T376	Clavi 7	R188	China Opera 1	R252	Detroit Pop2	R316	Pop R&B
T249	Mute Barafon 4	T313	Dulcimer 4	T377	Hard Vibe 7	R189	China Opera 2	R253	Worship Med	R317	Chart R&B
T250	Dual Horns 4	T314	Twin Bones 4	T378	Kawala 7	R190	China Ballad	R254	Worship Fast	R318	Modern Shuffle
T251	Soft Sax 3	T315	Soft Sax 5	T379	Shanai 3	R191	China Pop	R255	Piano Boogie	R319	Blues Rock
T252	Bodhran 3	T316	Shamisen 5	T380	Suona 6	R192	Xin Jiang	R256	Lovely Shuffle	R320	Dream Dance
T253	Guitar Pinch 3	T317	Suona 4	T381	Jungle Bass 4	R193	Shan Bei	R257	60's Rock & Roll	R321	US Chart Hit
T254	Crystal 3	T318	Bodhran 4	T382	Grow Guitar 7	R194	Yun Nan	R258	Kool Funk	R322	Soul R&B
T255	Grow Guitar 2	T319	Shamisen 6	T383	Bag Pipe 7	R195	He Nan	R259	Blueberry Blues	R323	R&B Soul Ballad
T256	Jazz Organ 6	T320	Electric Vraphone 6	T384	Crystal 4	R196	An Hui	R260	Shuffle Blues	R324	Euro Hip Hop
T257	Attack Barafon 2	T321	Tsugaru 7	T385	Guitar Pinch 5	R197	Guang Dong	R261	Mambo 4	R325	Trip Hop
T258	Xylophone 4	T322	Oct Harp 3	T386	Woodblock 8	R198	Xi Zang	R262	Mambo 5	R326	Ibiza 2004
T259	Soft Santur 3	T323	Kalimba 4	T387	Soft Sax 7	R199	Mongolian	R263	Pop Classics	R327	Mod Big Band Shfl
T260	Kawala 4	T324	Soft Clav. 2	T388	Attack Barafon 5	R200	Korean	R264	Live 8 Beat	R328	Modern Big Band
T261	Soft Guitar 5	T325	English Horn 4	T389	Barafon 6	R201	J-Pop Hit	R265	Power Rock2	R329	Pop Gtr Ballad
T262	Nay 4	T326	Didgeridoo 6	T390	Organ Flute 4	R202	16 Beat Ballad2	R266	Acoustic Rock2	R330	Ibiza 2002
T263	Synth Harpsi. 3	T327	Barafon 4	T391	Mute Barafon 9	R203	70's Pop Ballad	R267	Cool 8 Beat	R331	Euro Trance
T264	Wind Organ 3	T328	Indian Flute 7	T392	Shanai 4	R204	EP Ballad	R268	Uptempo 8Beat	R332	6-8 Trance
T265	Shanai 2	T329	Organ Flute 2	T393	Soft Clav. 3	R205	Power Ballad	R269	90's Rock Ballad	R333	Latin DJ's
T266	Woodblock 6	T330	Soft Santur 4	T394	Oct Harp 5	R206	Guitar Ballad2	R270	Chart Rock Shfl2	R334	Bomba
T267	Electric Vraphone 4	T331	Mute Barafon 7	T395	Tron Flute 5	R207	New R&B Ballad	R271	Brit Pop	R335	Chillout Cafe
T268	Kawala 5	T332	Nay 7	T396	Bright String 3	R208	Guitar Serenade	R272	Brazilian Samba	R336	70's Glam Piano
T269	Grow Guitar 3	T333	Hard Vibe 5	T397	Jazz Organ 9	R209	Organ Ballad2	R273	Brit Pop Swing	R337	French House
T270	Grow Guitar 4	T334	Bari & Tenor 4	T398	Mute Barafon 10	R210	Joropo	R274	60's 8 Beat	R338	English Waltz
T271	Steel Bell	T335	Bag Pipe 4	T399	Slow Violin 2	R211	Reggaeton	R275	Fast Bossa	R339	8 Beat Ballad1
T272	Wind Organ 4	T336	Tenor Sax 3	T400	Soft Sax 8	R212	French Waltz	R276	60's Guitar Pop	R340	Club House
T273	Soft Accord 2	T337	Organ Flute 3	T401	English Horn 6	R213	Merengue	R277	70's 8 Beat	R341	House2
T274	Kalimba 3	T338	Dulcimer 5	T402	Reed Horn 4	R214	12-8 Ballad	R278	90's Guitar Pop	R342	Jazz Gtr Club
T275	Twin Bones 3	T339	Twin Bones 5	T403	Indian Flute 8	R215	Norteno	R279	Soft Rock2	R343	Modern Jazz
T276	Church Bells 3	T340	Grow Guitar 5	T404	Castanets 4	R216	Jig	R280	Chart Guita rPop	R344	Acoustic Jazz
T277	Koto 6	T341	Kalimba 5	T405	English Horn 7	R217	Hawaiian	R281	Gujiira	R345	Cool Jazz Ballad
T278	Attack Barafon 3	T342	Oct Harp 4	T406	Tron Flute 6	R218	Electronica	R282	Modern Pop Bld	R346	Modern Jazz Bld
T279	Mute Barafon 5	T343	Nay 8	T407	English Horn 8	R219	Funky House	R283	Soul	R347	Easy Listening
T280	Nay 5	T344	Dual Horns 5	T408	Hard Barsoon 4	R220	Club Beat	R284	Skiffle2	R348	Bebop
T281	Jungle Bass 2	T345	Didgeridoo 7	T409	Dulcimer 6	R221	Retro Club	R285	6-8Soul	R349	Orch Big Band1
T282	Soft Accord 3	T346	English Horn 5	T410	Xylophone 6	R222	Mod Chart Pop	R286	Soul Brothers	R350	Big Band Fast1
T283	Hard Vibe 3	T347	Kawala 6	T411	Mute Barafon 11	R223	MOR Swing	R287	Happy Reggae	R351	Orchestra Swing1
T284	Soft Clav.	T348	Marimba 5	T412	Nay 9	R224	Retro Pop	R288	Pop Latin	R352	Orchestra Swing2
T285	Bag Pipe 2	T349	Barafon 5	T413	Mute Barafon 12	R225	Rumba Flamenco	R289	6-8Slow Rock	R353	70's Ranking Country
T286	Oct Harp 2	T350	Soft Accord 5	T414	Dual Horns 7	R226	Trance Pop	R290	6-8 Modern	R354	Jazz Waltz Med
T287	Woodblock 7	T351	Mute Barafon 8	T415	Kawala 8	R227	Orch Big Band2	R291	6-8 Orchestral	R355	Mariachi Waltz
T288	Mute Barafon 6	T352	Dual Horns 6	T416	Soft Clav. 4	R228	Big Band Fast2	R292	Schlager Shuffle	R356	US March
T289	Guitar Pinch 4	T353	Church Bells 4	T417	Hard Barsoon 5	R229	Midnight Swing	R293	Schlager Pop	R357	Guitar Rumba
T290	Dulcimer 3	T354	Wind Organ 5	T418	Dulcimer 7	R230	German Rock	R294	Schlager Rumba	R358	Slow Blues
T291	Soft Sax 4	T355	Attack Clav. 5	T419	Soft Accord 6	R231	Schlager Beat	R295	Euro Pop Organ	R359	Jazz Waltz Fast
T292	Electric Vraphone 5	T356	Jazz Organ 7	T420	Church Bells 5	R232	Mellow Hip Hop	R296	70's French Hit	R360	70's Country Pop
T293	Tsugaru 6	T357	Reed Horn 3	T421	Shamisen 7	R233	Classic Hip Hop	R297	Italian Mazurka	R361	Dixieland
T294	Reed Horn 2	T358	Tenor Sax 4	T422	Synth Harpsi. 4	R234	New Hip Hop	R298	Bohemian Waltz	R362	40's Big Band
T295	Castanets 3	T359	Chorus Guitar. 2	T423	Crystal 5	R235	Duranguense	R299	Schlager Samba1	R363	Easy Country
T296	Tron Flute 3	T360	Didgeridoo 8	T424	Kawala 9	R236	Laff	R300	Schlager Samba2	R364	Country Hits
T297	Attack Clav. 3	T361	Soft Santur 5	T425	Dual Horns 8	R237	Ober Walzer	R301	Scand Slow Rock	R365	Country 8 Beat
T298	Bari & Tenor 3	T362	Clavi 6	T426	Clavi 8	R238	Bhangra	R302	Schlager 6-8	R366	Sci-fi March
T299	Indian Flute 6	T363	Kalimba 6	T427	Electric Vraphone 7	R239	Zouk	R303	Schlager Fox	R367	Tap Dance Swing
T300	Soft Guitar 6	T364	Didgeridoo 9	T428	Castanets 5	R240	German March	R304	Highland Waltz	R368	Orchestral Bolero
T301	Nay 6	T365	Wind Organ 6	T429	Tenor Sax 5	R241	Enka	R305	Italian Polka	R369	Gospel Sisters
T302	Didgeridoo 5	T366	Tron Flute 4	T430	Tenor Sax 6	R242	Bolero Lento	R306	Grupera	R370	Italian Waltz
T303	Marimba 4	T367	Soft Sax 6	T431	Didgeridoo 10	R243	Sherif fReggae	R307	Danzon	R371	6-8 March
T304	Attack Clav. 4	T368	Suona 5	T432	Kalimba 7	R244	Beguine2	R308	Schlager Alp	R372	Bluegrass
T305	Jungle Bass 3	T369	Soft Guitar 7	T433	English Horn 9	R245	Latin Disco	R309	Saeidy	R373	Mod Cntry Bld1
T306	Hard Barsoon 2	T370	Hard Vibe 6	T434	Guitar Pinch 6	R246	Tango4	R310	Bhajan	R374	Scand Country1
T307	Suona 3	T371	Jazz Organ 8	T435	Hard Vibe 8	R247	Tango5	R311	Hip Hop Groove	R375	Scand Country2
T308	Hard Vibe 4	T372	Grow Guitar 6	T436	Mute Barafon 13	R248	Rock &Roll	R312	Chart Pop1	R376	Scand Shuffle
T309	Bag Pipe 3	T373	Xylophone 5	T437	Tenor Sax 7	R249	Rock & Roll Shfl1	R313	Organ Groove	R377	Worship Slow
T310	Soft Accord 4	T374	Bag Pipe 5	T438	Bag Pipe 8	R250	Oldies R & R	R314	Chart Pop2	R378	Disco Teens

T631	Koto 11	T695	Viola Attack 9	T759	Suona 14	T823	Soft Guitar 18	T883	Crystal 14	T943	Church Bells 15
T632	Kalimba 12	T696	Hard Vibe 13	T760	Kalimba 13	T824	Xylophone 11	T884	Barafon 9	T944	Tenor Sax 14
T633	Suona 10	T697	Koto 13	T761	Suona 15	T825	Tenor Sax 12	T885	Reed Horn 12	T945	Dual Horns 14
T634	Oct Harp 6	T698	Tenor Sax 9	T762	Slow Violin 12	T826	Oct Harp 8	T886	Dual Horns 13	T946	Barafon 12
T635	Koto 12	T699	Kawala 15	T763	Reed Organ 7	T827	Shamisen 12	T887	Chorus Guitar. 12	T947	Steel Bell 12
T636	Shanai 8	T700	Steel Bell 6	T764	Kawala 19	T828	Reed Horn 10	T888	Grow Guitar 13	T948	Marimba 15
T637	Electric Giutar (Clean) 8	T701	Soft Accord 11	T765	Reed Horn 9	T829	Marimba 12	T889	Shanai 12	T949	Electric Vraphone 15
T638	Clavi 12	T702	Organ Flute 10	T766	Attack Harp 7	T830	Reed Organ 11	T890	Twin Bones 12	T950	Soft Accord 15
T639	Attack Harp 3	T703	Organ Flute 11	T767	Oct Harp 7	T831	Attack Clav. 13	T891	Barafon 10	T951	Steel Bell 13
T640	Attack Clav. 10	T704	Bright String 9	T768	Kalimba 14	T832	Hard Barsoon 15	T892	Jungle Bass 11	T952	Tenor Sax 15
T641	Bright String 6	T705	Soft Santur 11	T769	Twin Bones 9	T833	Dual Horns 12	T893	Marimba 13	T953	Electric Giutar (Clean) 15
T642	Organ Flute 7	T706	Hard Barsoon 10	T770	Attack Clav. 12	T834	Soft Clav. 13	T894	Grow Guitar 14	T954	Soft Clav. 15
T643	Electric Giutar (Clean) 9	T707	Wind Organ 14	T771	Bari & Tenor 11	T835	Church Bells 12	T895	Viola Attack 12	T955	Bari & Tenor 14
T644	Kawala 12	T708	Synth Harpsi. 11	T772	Attack Harp 8	T836	Oct Harp 9	T896	Shamisen 15	T956	Attack Harp 13
T645	Bodhran 11	T709	Soft Sax 19	T773	English Horn 16	T837	Oct Harp 10	T897	Tsugaru 12	T957	Chorus Guitar. 14
T646	Shanai 9	T710	Bright String 10	T774	Twin Bones 10	T838	Indian Flute 13	T898	Reed Horn 13	T958	Shanai 15
T647	Suona 11	T711	Bright String 11	T775	Soft Clav. 12	T839	Viola Attack 11	T899	Shanai 13	T959	Reed Organ 14
T648	Synth Harpsi. 10	T712	Jungle Bass 9	T776	Tubular Bells 10	T840	Clavi 14	T900	Castanets 13	T960	Bodhran 14
T649	Bari & Tenor 6	T713	Soft Accord 12	T777	Slow Violin 13	T841	Koto 15	T901	Reed Organ 12	T961	Jungle Bass 14
T650	Kawala 13	T714	Reed Horn 8	T778	Synth Harpsi. 15	T842	Soft Guitar 19	T902	Twin Bones 13	T962	Tsugaru 14
T651	Bari & Tenor 7	T715	Slow Violin 10	T779	Guitar Pinch 12	T843	Castanets 12	T903	Chorus Guitar. 13	T963	Shanai 16
T652	Reed Horn 7	T716	Synth Harpsi. 12	T780	Church Bells 10	T844	Jazz Organ 14	T904	Tron Flute 13	T964	Bag Pipe 16
T653	Shamisen 10	T717	Attack Harp 6	T781	Castanets 10	T845	Bag Pipe 14	T905	Koto 16	T965	Viola Attack 15
T654	Soft Clav. 11	T718	Soft Santur 12	T782	Twin Bones 11	T846	Steel Bell 8	T906	Oct Harp 12	T966	Steel Bell 14
T655	Bari & Tenor 8	T719	Hard Barsoon 11	T783	Indian Flute 12	T847	Church Bells 13	T907	Grow Guitar 15	T967	Crystal 15
T656	Soft Santur 9	T720	English Horn 15	T784	Woodblock 11	T848	Guitar Pinch 13	T908	Shanai 14	T968	Bright String 15
T657	Attack Harp 4	T721	Crystal 8	T785	Attack Harp 9	T849	Soft Clav. 14	T909	Electric Giutar (Clean) 12	T969	Reed Horn 14
T658	Bright String 7	T722	Bari & Tenor 10	T786	Crystal 10	T850	Tubular Bells 12	T910	Castanets 14	T970	Guitar Pinch 15
T659	Guitar Pinch 11	T723	Koto 14	T787	Mute Barafon 21	T851	Grow Guitar 12	T911	Reed Organ 13	T971	Oct Harp 15
T660	Wind Organ 11	T724	Didgeridoo 20	T788	Synth Harpsi. 16	T852	Steel Bell 9	T912	Electric Giutar (Clean) 13	T972	Twin Bones 15
T661	Soft Guitar 12	T725	Tenor Sax 10	T789	Reed Organ 8	T853	Chorus Guitar. 10	T913	Soft Accord 14	T973	Chorus Guitar. 15
T662	English Horn 14	T726	Bright String 12	T790	Steel Bell 7	T854	Crystal 13	T914	Twin Bones 14	T974	Bari & Tenor 15
T663	Kawala 14	T727	Hard Vibe 14	T791	Chorus Guitar. 8	T855	Reed Horn 11	T915	Marimba 14	T975	Tenor Sax 16
T664	Grow Guitar 11	T728	Dual Horns 10	T792	Reed Organ 9	T856	Steel Bell 10	T916	Jungle Bass 12	T976	Indian Flute 15
T665	Attack Harp 5	T729	Kawala 16	T793	Marimba 10	T857	Kawala 21	T917	Electric Giutar (Clean) 14	T977	Bodhran 15
T666	Bari & Tenor 9	T730	Kawala 17	T794	Electric Vraphone 11	T858	Attack Harp 10	T918	Barafon 11	T978	Shamisen 16
T667	Organ Flute 8	T731	Bag Pipe 13	T795	Soft Guitar 16	T859	Oct Harp 11	T919	Viola Attack 13	T979	Attack Harp 14
T668	Woodblock 10	T732	Electric Giutar (Clean) 10	T796	Viola Attack 10	T860	Kalimba 15	T920	Slow Violin 14	T980	Barafon 13
T669	Hard Vibe 11	T733	Tron Flute 10	T797	Reed Organ 10	T861	Tubular Bells 13	T921	Oct Harp 13	T981	Jungle Bass 15
T670	Mute Barafon 20	T734	Kawala 18	T798	Bari & Tenor 12	T862	Electric Giutar (Clean) 11	T922	Dulcimer 15	T982	Tron Flute 14
T671	Tubular Bells 7	T735	Tron Flute 11	T799	Soft Sax 22	T863	Jazz Organ 15	T923	Bari & Tenor 13	T983	Attack Harp 15
T672	Suona 12	T736	Tubular Bells 8	T800	Jazz Organ 13	T864	Attack Barafon 15	T924	Bag Pipe 15	T984	Koto 17
T673	Bright String 8	T737	Synth Harpsi. 13	T801	Soft Guitar 17	T865	Soft Guitar 20	T925	Attack Clav. 14	T985	Reed Organ 15
T674	Hard Vibe 12	T738	Soft Santur 13	T802	Xylophone 9	T866	Soft Accord 13	T926	Kalimba 16	T986	Attack Clav. 15
T675	Slow Violin 8	T739	Tubular Bells 9	T803	Xylophone 10	T867	Synth Harpsi. 17	T927	Hard Vibe 15	T987	Clavi 15
T676	Shamisen 11	T740	Attack Barafon 11	T804	Church Bells 11	T868	Bodhran 12	T928	Organ Flute 14	T988	Dual Horns 15
T677	Tron Flute 9	T741	Attack Barafon 12	T805	Suona 16	T869	Woodblock 12	T929	Jungle Bass 13	T989	Steel Bell 15
T678	Attack Clav. 11	T742	Electric Vraphone 10	T806	Crystal 11	T870	Attack Harp 11	T930	Electric Vraphone 14	T990	Slow Violin 15
T679	Dual Horns 9	T743	Dual Horns 11	T807	Chorus Guitar. 9	T871	Organ Flute 12	T931	Viola Attack 14	T991	Soft Santur 15
T680	Wind Organ 12	T744	Shanai 10	T808	Crystal 12	T872	Jazz Organ 16	T932	Bodhran 13	T992	Barafon 14
T681	Twin Bones 8	T745	Bright String 13	T809	Hard Barsoon 13	T873	Didgeridoo 21	T933	Tubular Bells 15	T993	Organ Flute 15
T682	Reed Organ 6	T746	Crystal 9	T810	Castanets 11	T874	Church Bells 14	T934	Indian Flute 14	T994	Castanets 15
T683	Organ Flute 9	T747	Clavi 13	T811	Kawala 20	T875	Synth Harpsi. 18	T935	Tenor Sax 13	T995	Guitar Pinch 16
T684	Slow Violin 9	T748	Soft Sax 20	T812	Nay 16	T876	Chorus Guitar. 11	T936	Guitar Pinch 14	T996	Tron Flute 15
T685	Dulcimer 12	T749	Tron Flute 12	T813	Tubular Bells 11	T877	Organ Flute 13	T937	Steel Bell 11	T997	Tsugaru 15
T686	Tsugaru 11	T750	Dulcimer 14	T814	Hard Barsoon 14	T878	Shamisen 13	T938	Tsugaru 13	T998	Reed Horn 15
T687	Wind Organ 13	T751	Slow Violin 11	T815	Barafon 8	T879	Jungle Bass 10	T939	Soft Santur 14	T999	Barafon 15
T688	Soft Santur 10	T752	Tenor Sax 11	T816	Marimba 11	T880	Shamisen 14	T940	Bright String 14	T1000	Electric Giutar (Clean) 16
T689	Suona 13	T753	Nay 15	T817	Soft Sax 23	T881	Tubular Bells 14	T941	Oct Harp 14		
T690	Soft Guitar 13	T754	Soft Guitar 15	T818	Attack Barafon 13	T882	English Horn 17	T942	Attack Harp 12		
T691	Xylophone 8	T755	Shanai 11	T819	Electric Vraphone 12						
T692	Dulcimer 13	T756	Hard Barsoon 12	T820	Wind Organ 15						
T693	Marimba 9	T757	Synth Harpsi. 14	T821	Attack Barafon 14						
T694	Soft Guitar 14	T758	Soft Sax 21	T822	Electric Vraphone 13						

16. Приложение 2. Таблица тембров

R001	8Beat 1	R063	Power Rock	R125	Dance 2	T439	Shanai 5	T503	Bag Pipe 11	T567	Attack Barafon 8
R002	8Beat 2	R064	Dark Rock	R126	Disco	T440	English Horn 10	T504	Hard Barsoon 7	T568	Soft Clav. 9
R003	8Beat 3	R065	Jazz Rock	R127	House	T441	Didgeridoo 11	T505	Mute Barafon 15	T569	Tubular Bells 4
R004	8Beat 4	R066	Soft Rock	R128	Euro Beat	T442	Organ Flute 5	T506	Soft Sax 12	T570	Reed Organ 4
R005	8Beat 5	R067	Pop Rock 1	R129	Funky Dance	T443	Attack Barafon 6	T507	Attack Clav. 9	T571	Guitar Pinch 10
R006	8Beat 6	R068	Pop Rock 2	R130	80's Dance	T444	Jungle Bass 5	T508	Jazz Organ 12	T572	Bodhran 10
R007	8Beat 7	R069	Funky Rock 1	R131	Techno	T445	Barafon 7	T509	Soft Guitar 9	T573	Clavi 11
R008	8Beat 8	R070	Funky Rock 2	R132	Fusion	T446	Soft Santur 6	T510	Didgeridoo 13	T574	Viola Attack 6
R009	8Beat 9	R071	Ballad Rock	R133	Blues 1	T447	Slow Violin 3	T511	Bright String 4	T575	Synth Harpsi. 7
R010	8Beat 10	R072	Folk Rock	R134	Blues 2	T448	Hard Barsoon 6	T512	Electric Giutar (Clean) 4	T576	Jungle Bass 7
R011	8Beat 11	R073	Slow Rock 1	R135	Blues 3	T449	Didgeridoo 12	T513	Tsugaru 9	T577	Koto 9
R012	8Beat 12	R074	Slow Rock 2	R136	Funky 1	T450	Kalimba 8	T514	Nay 10	T578	Church Bells 7
R013	8Beat 13	R075	Slow Rock 3	R137	Funky 2	T451	Electric Giutar (Clean) 3	T515	Reed Horn 6	T579	Soft Accord 9
R014	8Beat 14	R076	Slow Rock 4	R138	Funky 3	T452	Dulcimer 8	T516	Didgeridoo 14	T580	Tubular Bells 5
R015	8Beat 15	R077	Rock&Roll 1	R139	Gospel	T453	Reed Horn 5	T517	Soft Clav. 5	T581	Bag Pipe 12
R016	8Beat 16	R078	Rock&Roll 2	R140	Rap 1	T454	Bodhran 5	T518	Soft Sax 13	T582	Grow Guitar 8
R017	8Beat 17	R079	Shuffle 1	R141	Rap 2	T455	Soft Sax 9	T519	Reed Organ 3	T583	Mute Barafon 18
R018	8Beat 18	R080	Shuffle 2	R142	Soul 1	T456	Mute Barafon 14	T520	Steel Bell 3	T584	Soft Accord 10
R019	16Beat 1	R081	Boogie 1	R143	Soul 2	T457	Guitar Pinch 7	T521	Clavi 10	T585	Electric Giutar (Clean) 6
R020	16Beat 2	R082	Boogie 2	R144	Soul 3	T458	Wind Organ 7	T522	Wind Organ 8	T586	Viola Attack 7
R021	16Beat 3	R083	Boogie 3	R145	Soul 4	T459	Guitar Pinch 8	T523	Synth Harpsi. 6	T587	Kawala 11
R022	16Beat 4	R084	Twist	R146	Country 1	T460	Indian Flute 9	T524	Bari & Tenor 5	T588	Soft Santur 7
R023	16Beat 5	R085	Ballad 1	R147	Country 2	T461	Bag Pipe 9	T525	Steel Bell 4	T589	Bright String 5
R024	16Beat 6	R086	Ballad 2	R148	Country 3	T462	Crystal 6	T526	Soft Sax 14	T590	Electric Giutar (Clean) 7
R025	16Beat 7	R087	Ballad 3	R149	Country 4	T463	Twin Bones 6	T527	Castanets 8	T591	Attack Barafon 9
R026	16Beat 8	R088	Ballad 4	R150	Country 5	T464	Crystal 7	T528	Didgeridoo 15	T592	Electric Vraphone 9
R027	Pop 1	R089	Ballad 5	R151	Jazz 1	T465	Soft Guitar 8	T529	Soft Sax 15	T593	Steel Bell 5
R028	Pop 2	R090	Soul Ballad	R152	Jazz 2	T466	Guitar Pinch 9	T530	Mute Barafon 16	T594	Mute Barafon 19
R029	Pop 3	R091	6/8 Ballad	R153	Jazz Waltz	T467	Attack Clav. 6	T531	Soft Guitar 10	T595	Chorus Guitar. 7
R030	Pop 4	R092	Acoustic Ballad	R154	Jazz Ballad	T468	Bodhran 6	T532	Soft Accord 8	T596	Soft Clav. 10
R031	Pop 5	R093	Colour Ballad	R155	Lounge	T469	Suona 7	T533	Wind Organ 9	T597	Viola Attack 8
R032	Pop 6	R094	Guitar Ballad	R156	Jive	T470	Chorus Guitar. 3	T534	Didgeridoo 16	T598	Church Bells 8
R033	Pop 7	R095	Piano Ballad	R157	Ragtime	T471	Slow Violin 4	T535	Electric Giutar (Clean) 5	T599	Soft Santur 8
R034	Pop 8	R096	Organ Ballad	R158	Charlston	T472	Clavi 9	T536	English Horn 11	T600	Wind Organ 10
R035	Pop 9	R097	Groove 1	R159	Big Band	T473	Castanets 6	T537	Soft Sax 16	T601	Indian Flute 11
R036	Pop 10	R098	Groove 2	R160	Swing	T474	Slow Violin 5	T538	Soft Guitar 11	T602	Tsugaru 10
R037	Pop 11	R099	Groove 3	R161	Caribbean	T475	Jazz Organ 10	T539	Hard Barsoon 8	T603	Dulcimer 10
R038	Pop 12	R100	Groove 4	R162	Reggae	T476	Jazz Organ 11	T540	Kalimba 9	T604	Grow Guitar 9
R039	Pop 13	R101	Groove 5	R163	Cha Cha	T477	Electric Vraphone 8	T541	Koto 8	T605	Tubular Bells 6
R040	Pop 14	R102	Groove 6	R164	Rumba	T478	Bodhran 7	T542	Soft Clav. 6	T606	Jungle Bass 8
R041	Pop Bolero	R103	Groove 7	R165	Samba	T479	Steel Bell 2	T543	Xylophone 7	T607	Dulcimer 11
R042	Pop BossaNova	R104	Groove 8	R166	BossaNova	T480	Synth Harpsi. 5	T544	Soft Clav. 7	T608	Organ Flute 6
R043	Pop Waltz	R105	Groove 9	R167	Mambo	T481	Marimba 6	T545	Church Bells 6	T609	Nay 11
R044	Pop Dance	R106	Piano 1	R168	Salsa	T482	Marimba 7	T546	Kawala 10	T610	Attack Barafon 10
R045	Motown	R107	Piano 2	R169	Beguine	T483	Attack Barafon 7	T547	Didgeridoo 17	T611	English Horn 13
R046	British Pop 1	R108	Piano 3	R170	Cumbia	T484	Castanets 7	T548	Kalimba 10	T612	Suona 8
R047	British Pop 2	R109	Piano 4	R171	Latin	T485	Hard Vibe 9	T549	Castanets 9	T613	Reed Organ 5
R048	British Pop 3	R110	Piano 5	R172	Baroque	T486	Tron Flute 7	T550	Didgeridoo 18	T614	Shamisen 8
R049	Guitar Pop	R111	Piano 6	R173	Bolero	T487	Soft Accord 7	T551	Bodhran 8	T615	Koto 10
R050	Slow Pop	R112	Piano 7	R174	Holly Wood	T488	Shanai 6	T552	English Horn 12	T616	Shamisen 9
R051	50's Pop	R113	Piano 8	R175	Foxtrot	T489	Woodblock 9	T553	Hard Vibe 10	T617	Church Bells 9
R052	80's Pop	R114	Piano 9	R176	Paso Doble	T490	Soft Sax 10	T554	Bodhran 9	T618	Nay 12
R053	Rock 1	R115	Piano 10	R177	Quick Step	T491	Slow Violin 6	T555	Indian Flute 10	T619	Hard Barsoon 9
R054	Rock 2	R116	Unplugged 1	R178	Bachata	T492	Soft Sax 11	T556	Dulcimer 9	T620	Slow Violin 7
R055	Rock 3	R117	Unplugged 2	R179	Boston	T493	Chorus Guitar. 4	T557	Soft Clav. 8	T621	Soft Sax 17
R056	Rock 4	R118	Unplugged 3	R180	Tango	T494	Attack Clav. 7	T558	Viola Attack 5	T622	Grow Guitar 10
R057	50's Rock	R119	Unplugged 4	R181	Waltz	T495	Reed Organ 2	T559	Attack Harp	T623	Attack Harp 2
R058	60's Rock 1	R120	Unplugged 5	R182	March	T496	Viola Attack 4	T560	Mute Barafon 17	T624	Suona 9
R059	60's Rock 2	R121	Unplugged 6	R183	Polka	T497	Koto 7	T561	Tenor Sax 8	T625	Nay 13
R060	70's Rock	R122	Unplugged 7	R184	Classical 1	T498	Tsugaru 8	T562	Twin Bones 7	T626	Synth Harpsi. 8
R061	80's Rock	R123	Unplugged 8	R185	Classical 2	T499	Bag Pipe 10	T563	Chorus Guitar. 6	T627	Didgeridoo 19
R062	Big Rock	R124	Dance 1	R186	China Folk 1	T500	Attack Clav. 8	T564	Shanai 7	T628	Nay 14
						T501	Tron Flute 8	T565	Kalimba 11	T629	Synth Harpsi. 9
						T502	Marimba 8	T566	Jungle Bass 6	T630	Soft Sax 18

R769	Gospel Sisters2	R837	16 Beat Ballad5	R905	Big Band Shuffle 10
R770	Italian Waltz2	R838	Straight Rock3	R906	Big Band Shuffle 11
R771	Limbo Rock2	R839	Easy Ballad3	R907	Big Band Shuffle 12
R772	Bluegrass2	R840	Forro3	R908	Fast Band 6
R773	Country Brothers2	R841	Fusion6	R909	Fast Band 7
R774	Scand Country3	R842	Funk3	R910	German Waltz2
R775	Scand Country4	R843	Viennese Waltz3	R911	Carnival3
R776	Scand Shuffle2	R844	Show Tune3	R912	Organ Samba3
R777	70's Chart Cntry2	R845	Dixieland3	R913	Reel3
R778	Pub Piano2	R846	Big Band Shuffle7	R914	Gay Gordons3
R779	Polka3	R847	Big Band Shuffle8	R915	Scand Waltz2
R780	Rock Cha Cha3	R848	Big Band Shuffle9	R916	Pop Classics3
R781	Schlager Rock3	R849	Pop Waltz4	R917	Live 8 Beat3
R782	Organ Samba2	R850	USA March3	R918	Power Rock5
R783	Gay Gordons2	R851	Hully Gully3	R919	Acoustic Rock5
R784	Swing Waltz2	R852	Tarantella2	R920	Cool 8 Beat4
R785	Reel2	R853	Limbo Rock3	R921	Uptempo 8Beat3
R786	Movie Ballad2	R854	Swing Waltz3	R922	90's Rock Ballad3
R787	Cool Pop2	R855	Pub Piano3	R923	Chart Rock Shfl4
R788	Rock & Roll Shfl3	R856	Jazz Waltz 5	R924	Brit Pop4
R789	Hard Rock3	R857	Jazz Waltz 6	R925	Brazilian Samba3
R790	Hard Rock4	R858	Show Tune4	R926	Brit Pop Swing4
R791	Club Pop4	R859	Polka4	R927	60's 8 Beat3
R792	8 Beat Pop3	R860	Ober Polka3	R928	Fast Bossa4
R793	8 Beat Pop4	R861	Party Polka2	R929	60's Guitar Pop4
R794	60's Rock 4	R862	Waltz3	R930	70's 8 Beat2
R795	16 Beat Ballad4	R863	Cha Cha3	R931	90's Guitar Pop2
R796	Straight Rock2	R864	Rumba4	R932	Soft Rock3
R797	Easy Ballad2	R865	Jive4	R933	Chart Guita rPop2
R798	Pop Mambo2	R866	Pasodoble3	R934	Guijira4
R799	BossaNova3	R867	Samba5	R935	Easy Listening3
R800	Forro2	R868	Samba6	R936	Bebop2
R801	Pop Classics2	R869	Schlager Rock5	R937	Orch Big Band3
R802	Live 8 Beat2	R870	Schlager Rock6	R938	Big Band Fast4
R803	Power Rock4	R871	Foxtrot4	R939	Orchestra Swing6
R804	Acoustic Rock4	R872	Viennese Waltz4	R940	Orchestra Swing7
R805	Cool 8 Beat3	R873	Tango8	R941	Rock Cha Cha4
R806	Uptempo 8Beat2	R874	Tango9	R942	Organ Swing2
R807	90's Rock Ballad2	R875	Country Ballad5	R943	Secret Service2
R808	Chart Rock Shfl3	R876	Country Two Step2	R944	Animation Bld2
R809	Brit Pop3	R877	Country 8	R945	Christmas Waltz2
R810	Brazilian Samba2	R878	Country 9	R946	Frankly Soul2
R811	Brit Pop Swing3	R879	Finger Pickin3	R947	Jazz Funk2
R812	60's 8 Beat2	R880	Country Brothers3	R948	Classic Big Band2
R813	Fast Bossa3	R881	New Country2	R949	French Jazz4
R814	60's Guitar Pop3	R882	Easy Country3	R950	Jump Jive2
R815	90's Soul2	R883	70's Chart Cntry3	R951	Mod Big Band Shfl4
R816	Guijira3	R884	Hoedown2	R952	Modern Big Band4
R817	Euro Hip Hop3	R885	Country Shuffle2	R953	Pop Gtr Ballad2
R818	Disco Pop3	R886	Schlager Polka3	R954	Ibiza 2002 2
R819	Disco Philly3	R887	Polka Pop4	R955	Euro Trance4
R820	Mod Big BandShfl3	R888	Blue Grass 7	R956	6-8 Trance2
R821	Modern Big Band3	R889	Blue Grass 8	R957	Latin DJ's2
R822	8 Beat Adria3	R890	Blue Grass 9	R958	Bomba2
R823	Disco Chocolate3	R891	70's Disco Funk2	R959	Chillout Cafe3
R824	Euro Trance3	R892	Disco Philly4	R960	70's Glam Piano2
R825	Love Song3	R893	Disco House3	R961	French House3
R826	Disco Party3	R894	80's Disco2	R962	English Waltz2
R827	Club Dance3	R895	Swing Fox2	R963	8 Beat Ballad3
R828	Modern Jazz3	R896	Slow Fox2	R964	Club House2
R829	Polka Pop3	R897	Organ Cha Cha2	R965	House3
R830	Fast Band5	R898	Organ Quick Step2	R966	Jazz Gtr Club3
R831	Orchestra Swing5	R899	Cat Groove3	R967	Modern Jazz4
R832	Movie Ballad3	R900	Dixie Jazz2	R968	Acoustic Jazz2
R833	Rock & Roll Shfl4	R901	Medium Jazz2	R969	Cool Jazz Ballad2
R834	Hard Rock5	R902	Jazz Big Band2	R970	Modern Jazz Bld2
R835	8 Beat Pop5	R903	Jazz Club2	R971	Modern Pop Bld2
R836	8 Beat Pop6	R904	Ragtime3	R972	Soul R&B2

7.FILL-IN/SYNC

Интерлюдия: в режиме ритма кратковременно нажмите клавишу [FILL-IN/SYNC], чтобы добавить функцию открытия ритма, После воспроизведения ритма секции вставьте интерлюдия. Нажмите и удерживайте кнопку [FILL-IN/SYNC] в первый раз, чтобы войти в режим синхронизации, и нажмите и удерживайте кнопку [FILL-IN/SYNC] во второй раз, чтобы выйти из режима синхронизации. В режиме синхронизации остановите воспроизведение ритма и нажмите на любую из первых 34 клавиш, чтобы автоматически воспроизвести выбранный ритм (аккорд).

8.CHORD

Нажмите кнопку [CHORD] в первый раз, чтобы войти в режим композитного аккорда, нажмите кнопку [CHORD] во второй раз, чтобы выйти из режима композитного аккорда. Функция клавиши [CHORD] работает только в режиме ритма и общем режиме.

При воспроизведении ритма нажмите клавишу [CHORD] и нажмите многопалецый метод в диапазоне клавиш A1~F#4, тогда будет слышен соответствующий аккордовый ритм, если не нажать многопалецый метод, то будет воспроизведен однопалецый аккорд.

9.RECORD

Нажмите кнопку [RECORD] в первый раз, чтобы войти в режим записи и стереть предыдущую запись; нажмите кнопку [RECORD] во второй раз, чтобы выйти из режима записи. В режиме записи будет воспроизводиться звук метронома, нажмите любую клавишу, чтобы начать запись. Максимальное количество записей - 176, при заполнении записи она не сможет продолжить запись ноты; во время записи вы можете нажать клавишу [PLAY], чтобы воспроизвести записанную ноту в любое время. Когда запись будет завершена, выйдите из режима записи.

10.PLAY

Нажмите кнопку [PLAY] в первый раз, чтобы воспроизвести записанные ноты или барабаны, и нажмите кнопку [PLAY] во второй раз, чтобы остановить воспроизведение. Нажмите кнопку воспроизведения, чтобы выйти из режима записи. Если ранее не было записано ни одного значения, нажмите кнопку воспроизведения, и никаких действий не произойдет.

11.Metronome

Нажмите клавишу [Metronome], чтобы воспроизвести ритм напрямую.

Нажмите кнопку [Metronome], чтобы выбрать функцию воспроизведения тактов. Диапазон выбора тактов: 1/4, 2/4, 3/4, 4/4, 5/4, 6/4, 7/4, OFF.

Во время записи нажмите клавишу [Метроном], чтобы включить или выключить звук метронома.

12. CHOOSE-/+

Кнопки [CHOOSE +] и [CHOOSE -] для последовательного выбора. С их помощью можно быстро выбрать тембр, ритм, песню, громкость, громкость аккомпанемента, скорость, переключение. Если число нажатий превышает максимальное число тембров, ритмов и песен, сохраняется исходное значение.

13. MENU

Меню разделено на 8 уровней, 1: скорость. 2: двойная клавиатура. 3: двойной тембр. 4: громкость аккомпанемента. 5: транспонирование, 6: скорость. 7: обучение, 8: подсветка клавиатуры

При установке текущего режима можно нажимать клавиши (+ -) для выбора различных диапазонов значений и переключателей.

Нажмите клавишу [MENU] в первый раз, чтобы войти в режим скорости, на цифровом индикаторе появится надпись too, а через 3 секунды на цифровом индикаторе отобразится состояние скорости (включена или выключена). Нажмите кнопку [+], чтобы включить функцию скорости, и на цифровом индикаторе появится надпись On. Нажмите кнопку [-], чтобы выключить функцию скорости, и на цифровом индикаторе появится надпись OFF. Нажмите кнопку [MENU] во второй раз, чтобы войти в режим настройки двойной клавиатуры, цифровая трубка отобразит SPL, и через 3 секунды цифровая трубка отобразит состояние двойной клавиатуры (включено или выключено). Нажмите кнопку [+], чтобы включить функцию двойной клавиатуры, и на цифровом индикаторе появится надпись On.

R379	Scand Bugg	R443	Jive2	R507	8 Beat Pop1	T055	Synth Voice	T119	Synth Drum	T183	Kawala 2
R380	Rock Cha Cha	R444	Pasodoble	R508	8 Beat Pop2	T056	Orchestra Hit	T120	Reverse Cymbal	T184	Didgeridoo 2
R381	Organ Swing	R445	Samba1	R509	8 Beat Soul1	T057	Trumpet	T121	Guitar Fret Noise	T185	Soft Guitar
R382	Secret Service	R446	Samba2	R510	8 Beat Soul2	T058	Trombone	T122	Breath Noise	T186	Suona 2
R383	Animation Bld	R447	Schlager Rock 1	R511	8 Beat Rock1	T059	Tuba	T123	Seashore	T187	Twin Bones
R384	Christmas Waltz	R448	Schlager Rock 2	R512	8 Beat Rock2	T060	Muted Trumpet	T124	Bird Tweet	T188	Jazz Organ 3
R385	Movie Swing	R449	Foxtrot2	R513	Classic 8Beat	T061	French Horn	T125	Telephone Ring	T189	Woodblock 3
R386	Movie Ballad	R450	Viennese Waltz	R514	Vintage Gtr Pop	T062	Brass Section	T126	Helicopter	T190	Soft Santur
R387	Bubblegum Pop	R451	Tango2	R515	Schlager Italia	T063	Synth Brass 1	T127	Applause	T191	Koto 4
R388	Rock & Roll Shfl2	R452	Tango3	R516	70's Disco1	T064	Synth Brass 2	T128	Gunshot	T192	Castanets
R389	West Coast Pop	R453	German Waltz	R517	70's Disco2	T065	Soprano Sax	T129	Yong Gin	T193	Viola Attack 3
R390	Classic 16 Beat	R454	Carnival	R518	Funky Disco	T066	Alto Sax	T130	Zheng	T194	Woodblock 4
R391	Jazz Pop	R455	Organ Samba	R519	Saturday Night	T067	Tenor Sax	T131	Zhong Ruan	T195	Bright String 2
R392	Kool Shuffle	R456	Reel	R520	Club Latin	T068	Baritone Sax	T132	Pi Pa	T196	Twin Bones 2
R393	8 Beat Ballad2	R457	Gay Gordons	R521	Disco Chocolate	T069	Oboe	T133	Big Souna	T197	Tenor Sax 2
R394	Chillout	R458	Scand Waltz	R522	Disco Fox	T070	English Horn	T134	Souna	T198	Wind Organ
R395	16 Beat Ballad1	R459	60's Rock Style	R523	Disco Funk	T071	Bassoon	T135	Er Hu	T199	Tron Flute
R396	Epic Ballad	R460	Standard Rock	R524	Disco Hands	T072	Clarinet	T136	Yue Hu	T200	Bodhran 2
R397	Easy Ballad	R461	Brit Rock Pop	R525	Disco Party	T073	Piccolo	T137	Di Zi	T201	Tron Flute 2
R398	Cuban Son	R462	60's Vintage Rock	R526	Disco Samba	T074	Flute	T138	Bong Di	T202	Jazz Organ 4
R399	Bachata2	R463	Chart Rock Shfl	R527	UK Pop	T075	Recorder	T139	Koto 2	T203	Soft Santur 2
R400	Forro	R464	60's Pop Rock	R528	Club Dance	T076	Pan Flute	T140	Qu Di	T204	Woodblock 5
R401	70's Chart Ballad	R465	Rock Billy	R529	Modern R&B	T077	Bottle Blow	T141	Jungle Bass	T205	Shamisen 4
R402	Romantic Ballad	R466	Rock Boogie	R530	Hip Shuffle	T078	Shakuhachi	T142	Koto 3	T206	Indian Flute 2
R403	90's Cool Ballad	R467	Latin Cha Cha	R531	Charleston	T079	Whistle	T143	Marimba 2	T207	Electric Viaphone 2
R404	Alp Ballad1	R468	Rock Classical	R532	Disco Pop	T080	Ocarina	T144	Tsugaru	T208	Soft Guitar 2
R405	Alp Ballad2	R469	Rock Shuffle	R533	Disco Soul	T081	Lead 1 (square)	T145	Kawala	T209	Mute Barafon 3
R406	E_Ballad	R470	Rock Pop	R534	Disco Trot	T082	Lead 2 (sawtooth)	T146	Attack Clav.	T210	Dual Horns 2
R407	Unplugged 9	R471	Rock'n Roll 1	R535	Euro Beat2	T083	Lead 3 (calliope lead)	T147	Crystal	T211	Xylophone 2
R408	Pop Ballad	R472	Rock'n Roll 2	R536	Rap 3	T084	Lead 4 (chiff lead)	T148	Bright String	T212	Didgeridoo 3
R409	Pop New Age	R473	Straight Rock	R537	Rave	T085	Lead 5 (charang)	T149	Clavi 2	T213	Wind Organ 2
R410	8 Beat Modern	R474	Jazz Rock2	R538	Techno2	T086	Lead 6 (voice)	T150	Chorus Guitar.	T214	Church Bells 2
R411	Country Ballad1	R475	Fast Gospel	R539	Techno3	T087	Lead 7 (fifths)	T151	Barafon	T215	Tsugaru 3
R412	Love Song	R476	Folk Rock2	R540	70's Disco Funk	T088	Lead 8 (bass+lead)	T152	Jazz Organ	T216	Nay 2
R413	Modern Country Pop	R477	Skiffle	R541	Disco Philly	T089	Pad 1 (new age)	T153	Indian Flute	T217	Guitar Pinch 2
R414	Electro Pop	R478	Funk Pop Rock	R542	Disco House	T090	Pad 2 (warm)	T154	Mute Barafon	T218	Grow Guitar
R415	Acoustic Ballad 2	R479	Contemp Rock	R543	80's Disco	T091	Pad 3 (polysynth)	T155	Dual Horns	T219	Indian Flute 3
R416	Piano Ballad 1	R480	Acoustic Rock	R544	Schlager Polka	T092	Pad 4 (choir)	T156	Electric Giutar (Clean) 2	T220	Synth Harpsi. 2
R417	R&B Ballad	R481	50's Pop2	R545	Polka Pop	T093	Pad 5 (bowed)	T157	Clavi 3	T221	Soft Sax 2
R418	Rock Ballad	R482	Cool Pop	R546	Blue Grass 1	T094	Pad 6 (metallic)	T158	Soft Sax	T222	Xylophone 3
R419	Slow & Easy	R483	Groovy Pop	R547	Blue Grass 2	T095	Pad 7 (halo)	T159	Electric Viaphone	T223	English Horn 2
R420	Analog Ballad	R484	60's Vintage Pop	R548	Blue Grass 3	T096	Pad 8 (sweep)	T160	Didgeridoo	T224	Soft Guitar 3
R421	Slow Rock 5	R485	80's Pop2	R549	Pop Waltz2	T097	FX 1 (rain)	T161	Barafon 2	T225	Castanets 2
R422	Slow Rock 6	R486	Rap Pop	R550	USA March	T098	FX 2 (soundtrack)	T162	Tubular Bells 2	T226	Soft Guitar 4
R423	Slow Rock 7	R487	Pop Rock 3	R551	Hully Gully	T099	FX 3 (crystal)	T163	Soft Accord	T227	Hard Vibe 2
R424	Slow Soul	R488	60's Soul	R552	Tarantella	T100	FX 4 (atmosphere)	T164	Barafon 3	T228	Reed Horn
R425	8 Beat Adria	R489	70's Soul	R553	Limbo Rock	T101	FX 5 (brightness)	T165	Clavi 4	T229	Nay 3
R426	Classic Piano	R490	Funk	R554	Swing Waltz	T102	FX 6 (goblins)	T166	Nay	T230	Bari & Tenor
R427	80's EP Ballad	R491	16 Beat Shuffle	R555	Pub Piano	T103	FX 7 (echoes)	T167	Oct Harp	T231	Kawala 3
R428	80's Boy Band	R492	Twist2	R556	Jazz Waltz2	T104	FX 8 (sci-fi)	T168	Attack Barafon	T232	Indian Flute 4
R429	Country Ballad2	R493	British Pop 4	R557	Jazz Waltz3	T105	Sitar	T169	Clavi 5	T233	Didgeridoo 4
R430	Country Two Step	R494	British Pop 5	R558	Show Tune	T106	Banjo	T170	Kalimba 2	T234	Attack Clav. 2
R431	Country 6	R495	Hard Rock1	R559	Polka2	T107	Shamisen	T171	Tsugaru 2	T235	Marimba 3
R432	Country 7	R496	Hard Rock2	R560	Ober Polka	T108	Koto	T172	Shamisen 2	T236	Bari & Tenor 2
R433	Finger Pickin	R497	Fusion2	R561	Party Polka	T109	Kalimba	T173	Woodblock 2	T237	Slow Violin
R434	Country Brothers	R498	Fusion3	R562	Pop Mambo	T110	Bagpipe	T174	Crystal 2	T238	Organ Flute
R435	New Country	R499	Funk Shuffl 1	R563	Latin Party Pop	T111	Fiddle	T175	Shamisen 3	T239	Jazz Organ 5
R436	Brisk Country	R500	Funk Shuffl 2	R564	Cumbia2	T112	Shanai	T176	Synth Harpsi.	T240	Electric Viaphone 3
R437	70's Chart Cntry	R501	Fusion Shuffl 1	R565	Parranda	T113	Tinkle Bell	T177	Jazz Organ 2	T241	Dual Horns 3
R438	Hoedown	R502	Fusion Shuffl 2	R566	Carnival2	T114	Agogo	T178	Viola Attack	T242	Indian Flute 5
R439	Country Shuffle	R503	Club Pop1	R567	BossaNova2	T115	Steel Drums	T179	Viola Attack 2	T243	English Horn 3
R440	Waltz2	R504	Club Pop2	R568	Mambo 2	T116	Woodblock	T180	Hard Barsoon	T244	Dulcimer 2
R441	Cha Cha2	R505	16 Beat Pop1	R569	Mambo 3	T117	Taiko Drum	T181	Mute Barafon 2	T245	Koto 5
R442	Rumba2	R506	16 Beat Pop2	R570	Bolero2	T118	Melodic Tom	T182	Bodhran	T246	Tubular Bells 3